

# How to Adjust Fine Lines

## GX Print Server for Iridesse Production Press

Version 1.0

FUJIFILM Business Innovation Corp.

#### Overview

This exercise will demonstrate the ability to adjust the default "Minimum Line Width" of fine lines on a printed output. This feature can greatly improve the thickness of fine line detail.

### Objective

By the end of this exercise users will be able to:

- Navigate to the location of the setting on the GX Print Server
- Make an adjustment to the default value
- Compare the results



AFTER									
0.06 pt 0.08 pt 0.1 pt 0.12 pt 0.2 pt							$\sim$	$\sim$	
Non.	Tue	(PPad.	Thu	Ani	OBat.	OBun.		Mon.	Cue
		3	#	5				1	2
		10		12				8	9
				19				15	16
	23	24	25	26				22	23
	30	31						29	30

#### **Adjust Fine Lines**

i

Print a sample file with the default setting before making the following adjustment.

#### 1. Log in as Administrator.

If you have forgotten or misplaced the login details, contact FUJIFILM Business Innovation Support via Live Chat at https://support-fb.fujifilm.com

2. <u>Select [Settings] > [System Settings]</u>.



3. Select [Server] in [Job Settings].

System Settings		×
✓ Server	Print Server Job Settings	
Server and Report/List Output Language/Region		4
Login Mode Security Liser/Group Management	Prioritize the Tone of Spot Color Gradation	
<ul> <li>✓ Network</li> <li>Printer</li> </ul>	Text/Image - Treat Fill and Shading as Text	
Print Server UI Client	✓ Print Registration Color with Pure K	
V Protocol LPR FTP	Minimum Line Width (pt) 0.000 + (0.000-10.000)	
AppleTalk JDF Network IPP	Binding Margin for Tiling (mm) 0.00 - + (0.00-200.00)	
Bonjour Forward To/Connect To	Display Pop-up When Job Error Occurs	
V Jop Server Printer	Check Image Warning for Specified Jobs when Printing Starts	
Screen	Job Processing Order	•
Job History Calibration	Apply Settings Shown on This Screen Cancel Change Restore Default	ts
A simple explanation will appear when an app	licable area is right clicked.	
	Clos	е

4. Change the value of [Minimum line Width] (Eg. 0.180 pt) and click [Apply Settings Shown on This Screen].

System Settings		X
✓ Server	Print Server Job Settings	
Server and Report/List Output Language/Region		<b>A</b>
Login Mode Security User/Group Management	Prioritize the Tone of Spot Color Gradation	
✓ Network Printer	Text/Image - Treat Fill and Shading as Text	
Print Server UI Client	Print Registration Color with Pure K	
<ul> <li>Protocol</li> <li>LPR</li> <li>FTP</li> </ul>	Minimum Line Width (pt) 0.180 + (0.000-10.000)	
AppleTalk JDF Network	Binding Margin for Tiling (mm) 0.00 + (0.00-200.00)	
Bonjour Forward To/Connect To	Display Pop-up When Job Error Occurs	
✓ Job Server Printer	Check Image Warning for Specified Jobs when Printing Starts	
Screen	Job Processing Order	
Calibration	Apply Settings Shown on This Screen Cancel Change Restore	Defaults
A simple explanation will appear when an ap	plicable area is right clicked.	
		Close

5. Click [Yes] to save changes.

Confirm						
Settings were changed. Do you want to save changes?						
	No	Yes				

6. Click [Close].

i



Congratulations you have now completed this exercise.

compare to the defaults.