

How To Create a Job Template

GX Print Server for PrimeLink™

Version 1.0

FUJIFILM Business Innovation Corp.

Overview

This exercise will demonstrate the ability to save pre-defined job properties as a Job Template and apply the Job Template to logical printers (Hot Folders) and jobs.

This demonstration will use the example of changing the default "Rip Type" from CPSI (Configurable PostScript Interpreter) to APPE (Adobe PDF Print Engine).

Please note that this option has been selected for demonstration purposes only and that the main concept of creating a change to the default options can be applied to any option within the "Job Properties" windows. Job Templates are an effective way of applying commonly used functions to multiple jobs in a production environment.

Objective

By the end of this exercise users will be able to:

- Navigate to the location of the setting on the GX Print Server.
- Create a new job template.
- Apply the Job Template to a job.

Create Job Template

- 1. Log in as an "Administrator"
- 2. Select the Sidebar menu button, as highlighted in the following image

🗏 FUJI XeroX 🕥

3. Select [Queues] > [Job Template]

×				GX-i Pr
Job Manager	>	V Print Server	: F	Printer Ready
Layout	>	PrimeLink™ C9065 Prir	nter	
Color	>	Job Manager	Import Jot	us Job His
Calibration	>	Job Filter	1	
Media	>	All Jobs		D Y Name 34 Gold Make
Queues	>	Eogical Printers		Go gro_resea
Console		Job Templates]
Timeline		- #Delatin		
Widgets			T.	
Auto-Hide		-	_	

4. Click 💽 (Create New).

2	8	→
Logical Printe	rs Job Mana	ger Import Jobs
Logical Printers	Job Templates	
ob Templates :	4 Item(s)	
ob Templates :	4 Item(s)	Comments
ob Templates : Name template_default	4 Item(s)	Comments default(template_default)
ob Templates : Name template_default template_hold	4 Item(s) Control Cont	Comments default(template_default) default(template_hold)
b Templates : Name template_default template_hold template_print	4 Item(s) Logical Printers Ipr_hold Ipr_print; Mail_001	Comments default(template_default) default(template_hold) default(template_print)

5. Enter [Template Name] and click [Edit Job Properties].

reate Te	mplate			
ame omments	APPĘ			
Edit Jot ogical print Name	Properties ers to which this temp Type	plate is assigned	Assigned	
JSO	JDF			
	TCP/IP (LPD)	This is Comment		
lpr_print				
lpr_print	TCP/IP (LPD)	This is Comment		
lpr_print lpr_hold lpr_rip	TCP/IP (LPD) TCP/IP (LPD)	This is Comment This is Comment		
lpr_print lpr_hold lpr_rip lp	TCP/IP (LPD) TCP/IP (LPD) TCP/IP (LPD)	This is Comment This is Comment		

6. Select [Job Settings] > [Settings] > [Processing Options] > [APPE] in [RIP Type] and click [OK].

Properties Copies Favorities Lon Helmons	1 - + z seaa) Burnary	When the instruction properties	Prioritize i can far templates is (ON), the is from the client are ignored, and the job is remplate settings will be applied that.	i on Tor i
Legand Colorse Colorse Colorse Colorse Colorse Color Color	PP Type CPST (Cant Quickle PaceSorpt Interpreter) Or PTF (Adapt Point Page x) Start Pricing at the Specified Trave Start		Receive and RIP RIP Complex Jub (Slower) Also Job Doction Print E-mail Prior Only) Genal Prior Only) Use POL Settings	

7. Click [OK].

lame Comments	APPE			
🖋 Edit Jol ogical print	Properties	olate is assigned		
Name	Туре	Comments	Assigned	-
JSO	JDF			
lpr_print	TCP/IP (LPD)	This is Comment		
lpr_hold	TCP/IP (LPD)	This is Comment		
lpr_rip	TCP/IP (LPD)	This is Comment		
	TCP/IP (LPD)			
lp			V V	



The Job Template can be assigned to Logical Printers by checking the box in [Assignment] column in the dialog window.

Congratulations you have now successfully created a job template.

If required, you may proceed to the next example, applying a Job Template to a Job.

Apply a Job Template To a Job

1. In the shortcut area, select [Import Jobs].

Job Manager	Import Jobs	Job History	Imposition Template	CMS
Logical Printers Job	Templates			
Logical Printers : 7 ite	m(s) viite) (🕲 Deactiviite)	Process Jobs	(11 Hold Jobs) (11 Assign	Template

2. Select the file to import and select APPE in [Template] and then click [OK].

Select File					Select Folder
Frint Server v	Name <mark>–</mark> fukui	Type Folder	Size	Las 201	California S
lusers - detauttusen0 T Server Contacts ✓ = Destoon ■ Lakut	Instaler karre karre nita ProcessExplorer ProcessExplorer ProcessExplorer ProcessExplorer ProcessExplorer	Faldar Fotte Fotto Fotto Fotte Fotte Fotto		201 201 201 201 201 201 201	Job Properties Template APPE APPE
S installer S arne onla PrecestExplorer	Sakura2.2.0.1 x64 Torii YCH Stoch	Folder Folder Folder Folder		203 201 201 201 201	emplate_default template_hold template_print template_print
PRISKV_170813_V200 PHISKV_170813_V200 PHISKV_170814_V200 PHISKV1722-0-1_x664 Tori Soft YOH VOH Voth Voth Documents	harkot A nipff	PDF	23.840 K	F 20	RP and Ilaid Prior Restore Stare When Joh is Saved Decreman After Printing Restore Stare When Jobs
He Name bookist_A_ol acf de Type (Importable Hiles (*.jbt,*.bbt,*.	zip/".ps;".pd(;".eps;".bf(".jpg) +				Finten Roster

- 3. Double-click the imported job to display Job Properties.
- 4. Check [APPE] is selected in [Job Settings] > [Settings] > [Processing Options] > [RIP Type] and click [OK].

D 34 Gold Makeu	p LadyPEport Owner: Administrator Numbe	r of Pages: 1
Сарен	1 - + (5.8988) Document Szer: 311 15 x 482,84 (n	nn;
Favorities Job Settings 1	Burnmary	
Expand Collagee	RIP Type CPSI (Configurable PosiScript Interpreter)	RIP Compex Job (Slawer)
Processing Options Security Wattings/Detection	APPE (Adaba POF Print Engine)	Allow Job Detetion
Job Information	Start Printing at the Specifies Time	Print E-mail Information
Paper	Star Time	(E-mail Print Only)
Eavory Eavory		Las DDi Satiros
Color	autoratie 🗰 (accore 🖂)	An un com da
Output		



The Job Template can be applied by clicking [Use Template] in Job Properties.

Congratulations you have now completed this exercise