

# How to Adjust Fine Lines


## Revoria Flow PC11 for Revoria Press PC1120

Version 1.0

#### Overview

This exercise will demonstrate the ability to adjust the default "Minimum Line Width" of fine lines on a printed output. This feature can greatly improve the thickness of fine line detail.


The following is an example of specifying 0.12 pt for Minimum Line Width.

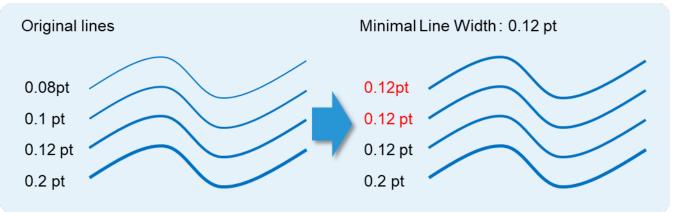

### Objective

By the end of this exercise users will be able to:

- Navigate to the location of the setting on the Revoria Flow PC11
- Make an adjustment to the default value
- Compare the results

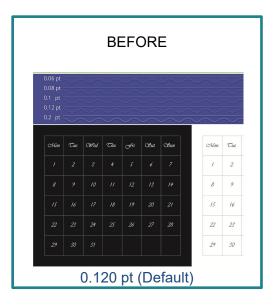

AFTER								
			<pre> </pre>	<pre></pre>			$\approx$	
Mon.	Tue.	Wad.	Thu	An	Obra.	Œun.	Mon	Tue
	2	3		5	6	7	/	2
8		10		12	13	14	8	9
		17		19	20	21	15	16
	16 23	17 24		19 26	20 27	21 28	15 22	16 23

### **Adjust Fine Lines**

Print a sample file with the default setting before making the following adjustment.




#### 1. Log in as an "Administrator"

The default password for Administrator is aaaaa.

2. Select Settings > System Settings.



3. In 'Job' menu, select Server.

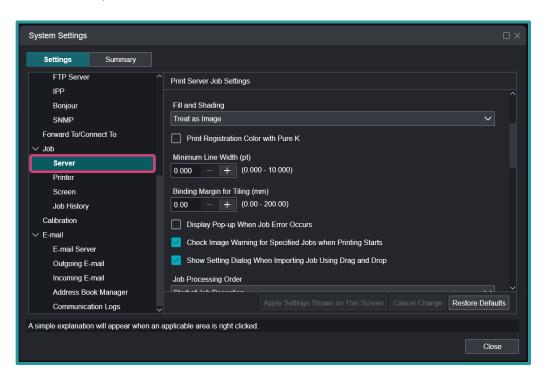


4. Change the Value of 'Minimum line Width' (e.g. 0.180 pt) then click **Apply Settings Shown on This Screen**.

System Settings		$\Box \times$
Settings Summary		
Settings     Summary       FTP Server     ^       IPP     Bonjour       SNMP     Forward To/Connect To       ✓ Job     Server       Printer     Screen       Job History     Calibration       ✓ E-mail     E-mail       E-mail     E-mail       Incoming E-mail     Address Book Manager	Print Server Job Settings         IText as integer         Print Registration Color with Pure K         Minimum Line Width (pt)         0.180       +         (0.000 - 10.000)         binoing Margin for Thing (mm)         0.00       -         Display Pop-up When Job Error Occurs         Check Image Warning for Specified Jobs when Printing Starts         Show Setting Dialog When Importing Job Using Drag and Drop         Job Processing Order         Start of Job Reception         Processing Order	
Communication Logs	Apply Settings Shown on This Screen Cancel Change Restore Defa	ults
A simple explanation will appear when an	applicable area is right clicked.	se

5. Click Yes to save changes.

Confirm						
Settings were changed. Do you want to save changes?						
	No	Yes				

6. Click Close.

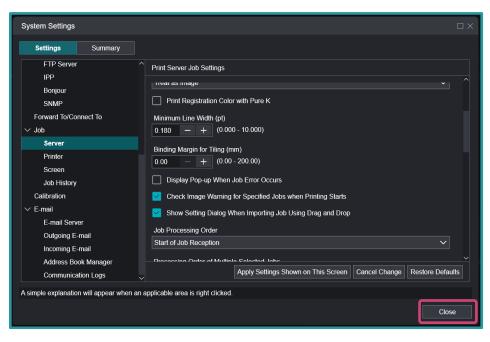

Print a sample file with your new settings to compare to the defaults.



## Adjust Fine Lines for Each Job – Job Properties

Print a sample file with the default setting before making the following adjustment.



#### 1. In the shortcut area, select Import Jobs.

	Job Manager	Import Jobs	Job History	Imposition -	Templates
>	Held: 5		,		> 6 6 6
Job F	ID 🍸 Job Na	me	γ	Comments	

 
- 2. Select a sample job to import.
- 3. In 'Operation After Importing', select Hold Jobs, and then click OK.

Import Jobs Select File					Select Folder
Client (Local Machine)	Name	Туре	Size	Last Modified	Select Folder
	Custom Office Templates     FUJIFILM     OneNote Notebooks	Folder Folder Folder		7/6/2021 10:2 7/2/2021 3:1: 7/2/2021 2:18	Job Properties Template template_default Logical Printer
OneNote Notebooks     OPTIM     OPTiM     Official My Pictures     O     C:     O     Z:	OPTiM Booklet_A pdf Sample_ob pdf	Folder PDF PDF	177 КВ 455 КВ	7/2/2021 2:46 7/16/2021 2:4 7/16/2021 5:2	Ipr_print_TCP/IP (LPD)         Operation After Importing         Hold Jobs         RIP and Hold         Print         Restore State When Job Is Saved         Operation After Printing         Retain Jobs
File Name Sample_job.pdf File Type Importable Files (*;bf;*.b	*.ps;*.pdf;*.eps;*.tif;*.jpg;*.vpc) ∨				Cancel

- 4. Double-click the imported job to display the Job Properties.
- Select Job Settings > Image Quality > Advanced > Minimum Line Width (pt). If "Use System Settings" is ticked, the value at [System Settings] > [Job] > [Server] > [Minimum Line Width] is used.

Job Properties						
ID 74 Sample_job.pdf Copies 100 - + (1 - 9999) Document Size: A4 (210 x 297 mm) P						
Favorites Job Settings Summary						
Expand Collapse <ul> <li>Settings</li> <li>Paper</li> <li>Layout</li> <li>Color</li> <li>Image Quality</li> <li>Additional Settings</li> <li>Printer</li> </ul> Advanced <ul> <li>Specify Transparency for Spot Color</li> <li>Transparent</li> <li>Edge Density Correction</li> <li>Edge Density Correction</li> <li>Edge Density Correction</li> <li>Gradation Correction</li> <li>Apply Only to Gradation</li> </ul>	Trapping None  Template Name Select. Use User Defined Use File Settings Stroke Adjustment Based on File Settings Perform EPS (JPEG Compression) Color Output Minimum Line Width (pt) Use System Settings 0.120 - + (0.000 - 10.000)					
A simple explanation will appear when an applicable area is right clicked.           Save as         Use	Apply Reset Cancel OK					

6. Click Apply, and then click Print.



Congratulations you have now completed this exercise.



For more information, please visit us at **FUJIFILM Business Innovation Asia Pacific Pte. Ltd support-fb.fujifilm.com** FUJIFILM and FUJIFILM logo are registered trademarks or trademarks of FUJIFILM Corporation