

# How to Adjust Text/Line Weight

# Revoria Flow PC11 for Revoria Press PC1120

Version 1.0

FUJIFILM Business Innovation Corp.


#### Overview


This exercise will demonstrate the ability to make changes to the default Adjust Text/Line Weight setting. This feature can modify the outline to a specified density and achieve clearer, sharper printed results for text/line elements. It can be used to improve image quality when a design has reversed text and fine lines (i.e white text on a black solid).

## Objective


By the end of this exercise users will be able to:

- Navigate the feature on the Revoria Flow PC11
- Make an adjustment to the default value
- Compare the results

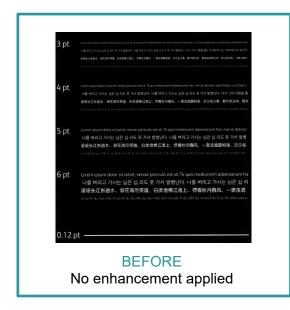

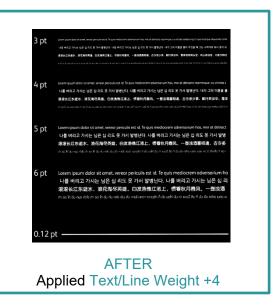

## Adjust Text/Line Weight

 

1. In the Shortcut Area, select Import Jobs.

PrintStation								-	$-\Box \times$
< 🦰 Job Manager 🗸	🔓 Layout 🗸 🚦	🔓 Color 🗸 📕 Calibrat	ion 🗸 🛱 Media 🗸 📫 Qu	ueues $\vee :\equiv$ Console	🗄 Timeline 🛛 🗲	Administrator	(Administrator) 윤	, -1 6 4	b ?
✓ Print Server : Pr	inter Ready							11	
<ul> <li>Revoria Press PC1120 -</li> </ul>	Connected To: Rev	voria Flow PC11					Consumat	oles Information	▼ <
G Job Manager	) Import Jobs	Job History	Imposition Templates	CMS	Calibration	L Media library	Job Templates		88
< Job Filter		Held: 9		前 🖿 龄 器	Processing: 0			1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	<
環 亡 All Jobs	ئې 10	ID ↓ Job Name 2 Calibration10	5Chart_K4_4C.pdf	γc	ID Job Name	Comments Attribu	ites Status R	IP Processin	Job Previ

- 2. From the Import Jobs window (pop-up window), select the file you want to import. There might be an instance that you will need to browse through the folders to select your file.
- 3. Still on the Import Jobs window on the left side, under Job Properties > Template select template default. On the same screen under Operation After Importing, select Hold Jobs, then press OK.

Import Jobs		
Select File		Select Folder
Client (Local Machine) 🗸 🗸	Name ^	
∼ 🗅 Manual 🌱	CPMP_Manual.pdf	Job Properties
✓ □ en_US □ Manual PDF	Z License.pdf	Template version for the second se
∧ □ ja_JP	Manual_Basic.pdf	Logical Printer
∧ □ ko_KR	Manual_Client.pdf	
∽ □ zh_CN	Manual_Color.pdf	Operation After Importing
∧ □ zh_TW □ raw 6086 0 job010/	Manual_JobProperty.pdf	Hold Jobs
∧ □ My Documents	Manual_Settings.pdf	RIP and Hold     Print
∧ □ Mv Pictures	Security ndf	
File Name License.pdf		Operation After Printing
File Type Importable Files (*.	bf,*.bbf,*.zip;*.ps;*.pdf,*.eps;*.tif,*.jpg;*.vpc) ∨	🗹 Retain Jobs
		Retain Raster
		Cancel OK

- 4. The job is imported in the Held list. Double-click on the imported job to display Job Properties
- 5. From the Job Properties window, select Job Settings > Image Quality > Printer > Adjust Text/Line Weight.


Job Properties			
ID 10 License.julf Copies 1 Favorites Job Settings	Owner: User         Number of Pages: 16           - + (1 - 9999)         Document Size: 234.82 x 321.82 (mm)           Summary         Summary		
Expand       Collapse <ul> <li>Settings</li> <li>Paper</li> <li>Layout</li> <li>Color</li> <li>Color</li> <li>Color</li> <li>Additional Settings</li> </ul> Printer <ul> <li>Advanced</li> <li>Specialty Toner</li> <li>Output</li> </ul>	Toner Quantity Adjustment Default  Adjust Text/Line Weight  Adjust Text/Line Weight  K Text/Line Only All Text/Line  Image Enhancement  Edge Enhancement	Image Quality Standard	
A simple explanation will appear when a Save as Use		pply Reset Cancel O	ĸ

6. Choose the required level of adjustment for Adjust Text/Line Weight. For this exercise set it to 4 which is the highest number for this adjustment.

Job Properties	
ID 10 License.pdf Owner: User Number of Pages: 16 Copies 1 - + (1 - 9999) Document Size: 234.82 x 321.82 (mm) Favorites Job Settings Summary	
Expand Collapse <ul> <li>Settings</li> <li>Paper</li> <li>Layout</li> <li>Color</li> <li>Image Quality</li> </ul> <ul> <li>Color</li> <li>Maige Quality</li> </ul> <ul> <li>Adjust Text/Line Weight</li> <li>Low 1 2 3 4 High</li> <li>K Text/Line Only</li> <li>All Text/Line</li> <li>All Text/Line</li> <li>Image Enhancement</li> <li>Edge Enhancement</li> </ul>	~
A simple explanation will appear when an applicable area is right clicked.           Save as         Use         Print         Apply         Reset         Cancel	ОК

7. Click **Apply** to set the changes made. Press **Print** to proceed with printing with the text/line weight adjustment.

Job Properties				۵×
ID 10 License.pdf Copies 1	Owner: Us - + (1 - 9999) Document	er Number of Pages: 16 Size: 234.82 x 321.82 (mm)		
Favorites Job Settings	Summary			
Expand Collapse	Toner Quantity Adjustment		Image Quality	
へ I Settings	Default	~	Standard	~
	K Text/Line Only All Text/Line	I High		
Advanced	<ul> <li>Image Enhancement</li> <li>Edge Enhancement</li> </ul>			
A simple explanation will appear when	an applicable area is right clicked.			
Save as Use		Print App	ply Reset	Cancel OK

 

Congratulations you have now completed this exercise.



For more information, please visit us at **FUJIFILM Business Innovation Asia Pacific Pte. Ltd support-fb.fujifilm.com** FUJIFILM and FUJIFILM logo are registered trademarks or trademarks of FUJIFILM Corporation